


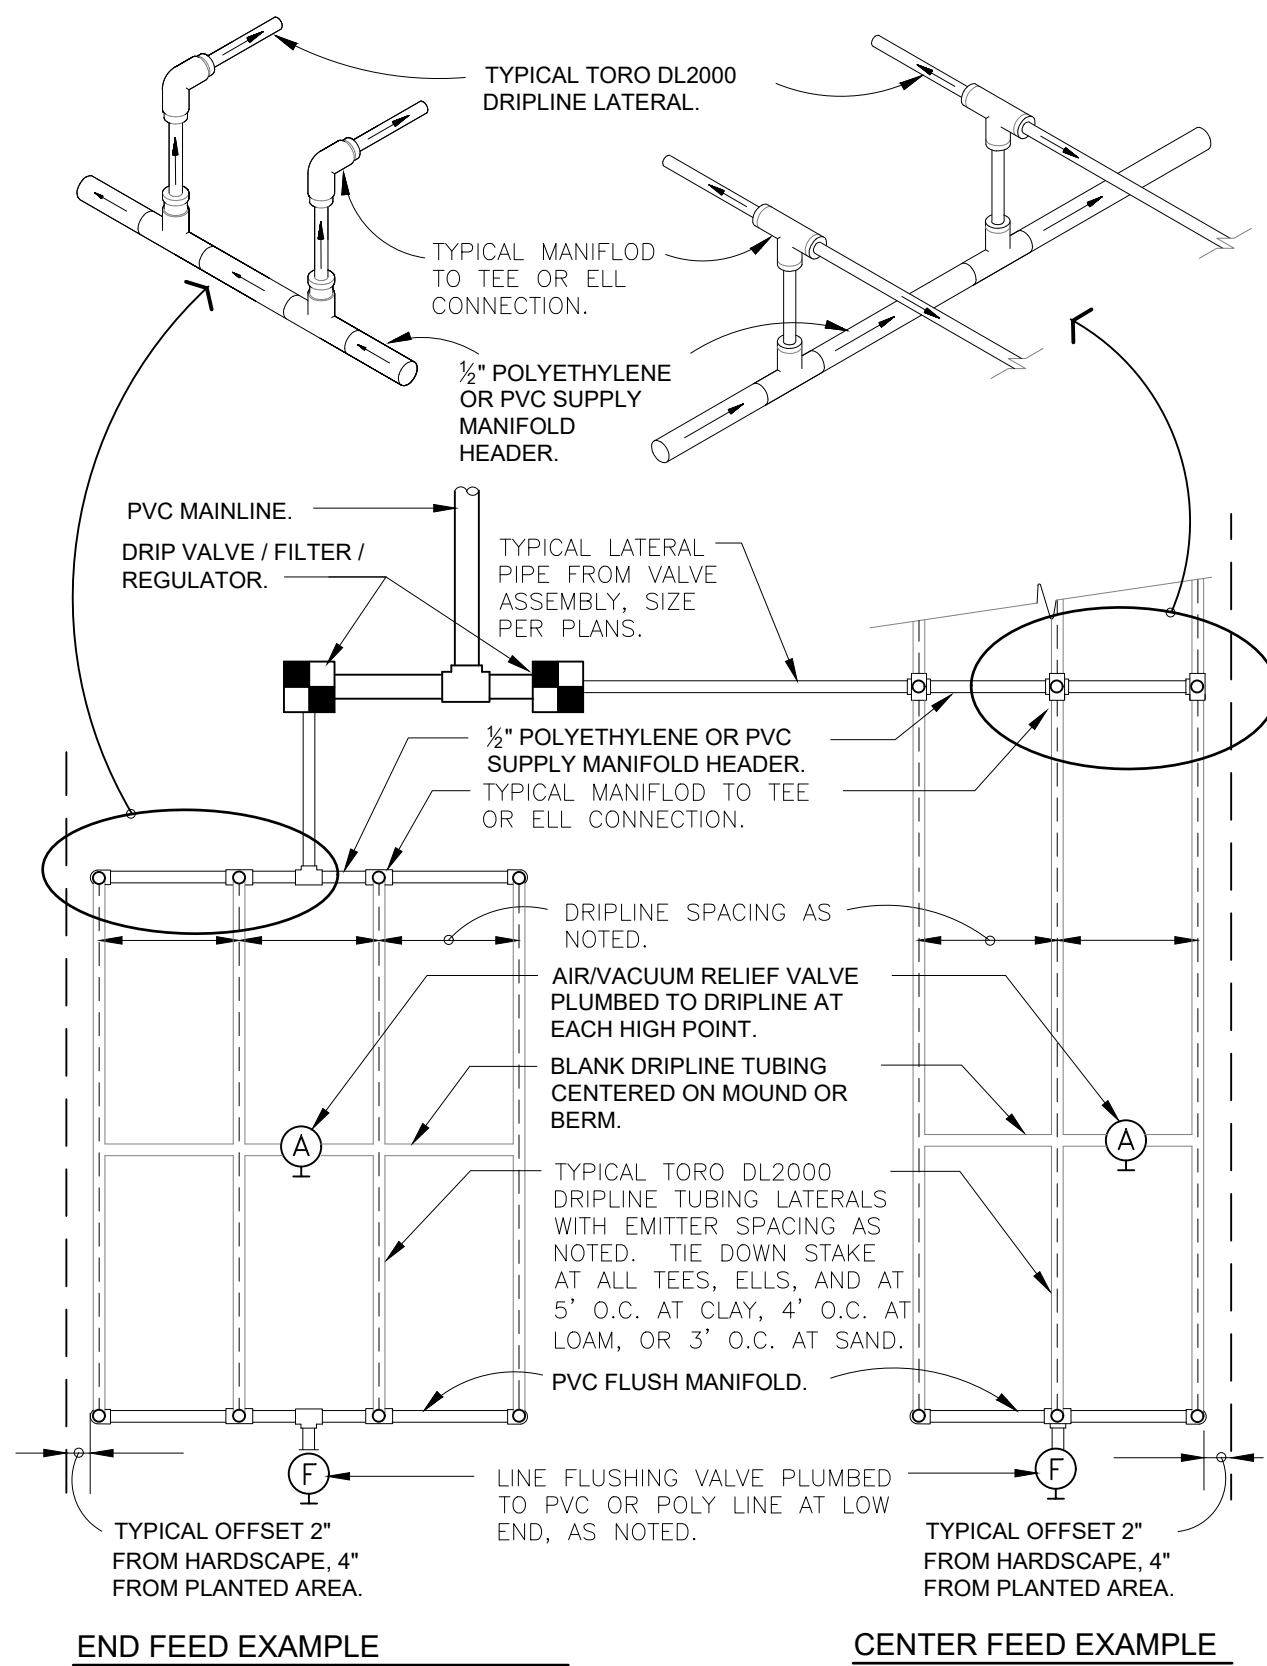

1 TORO DL2000 DRIPLINE


3" = 1'-0"

FX-IR-FX-HEAD-01

LEGEND

1. TORO WIRELESS RAIN SENSOR MODEL NO. TWRS. REFER TO PLAN FOR SENSOR LOCATION.
2. ADJUSTABLE MOUNTING BRACKET.
3. WOOD SCREW.
4. WOOD FENCE.
5. ANTENNA.

(SURFACE MOUNT)

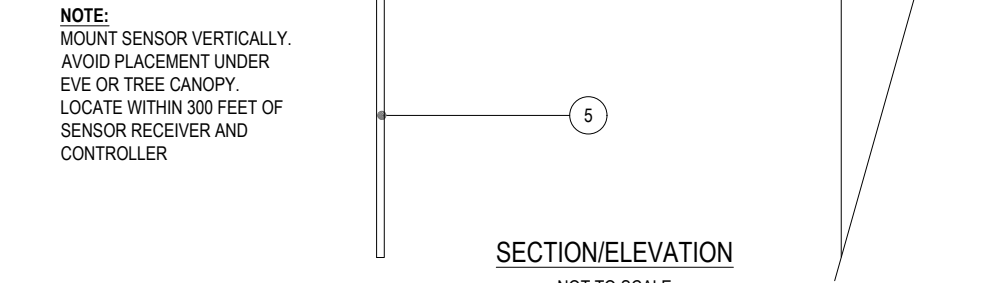


NOTE:
1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.
3. CONTRACTOR NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT: www.CADetails.com/info
REFERENCE NUMBER: 065-259.

8 TORO - TWRS WIRELESS RAIN SENSOR

N.T.S.

DETAIL-FILE


328413.49-33

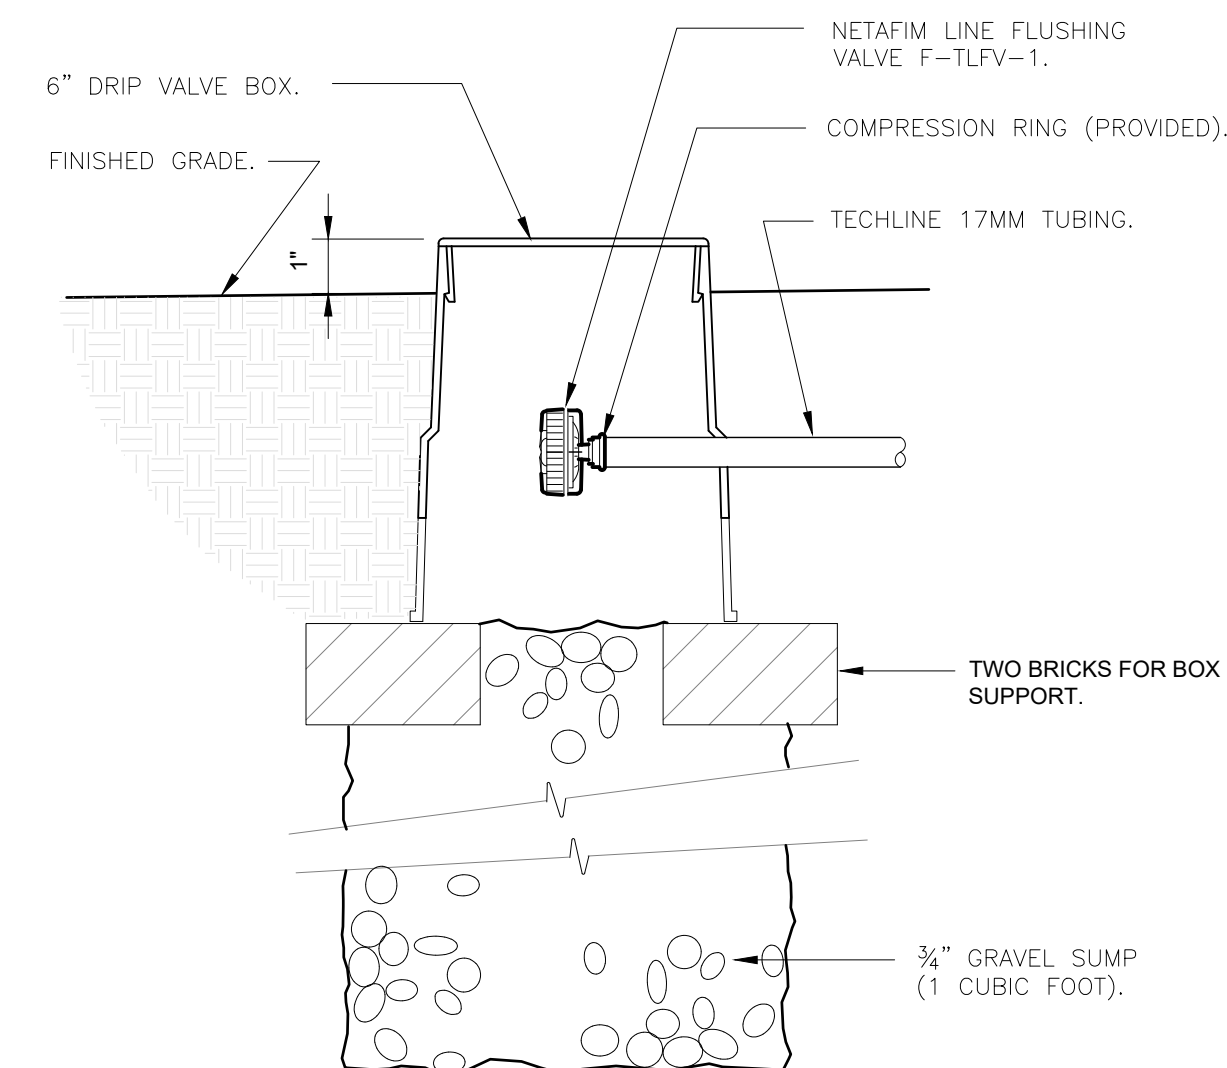

9 NETAFIM TECHLINE FLUSH VALVE

3" = 1'-0"


328413.49-33

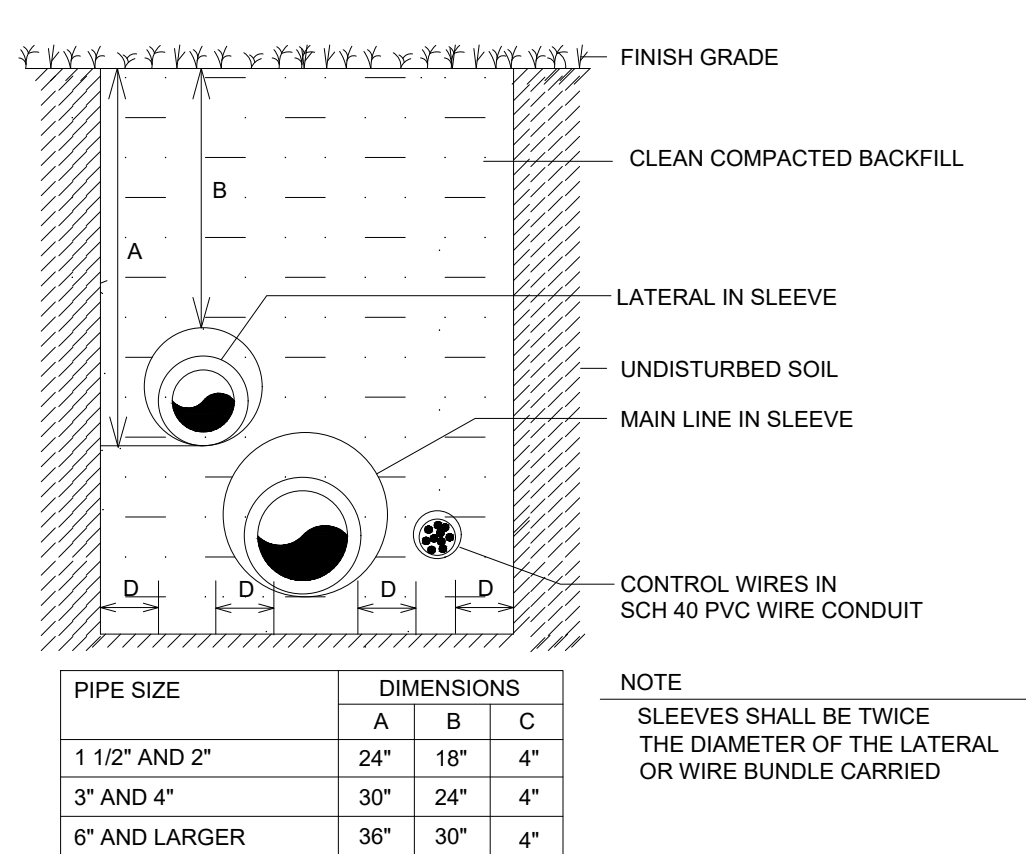TRENCHING DETAIL (NTS)
VEHICULAR TRAFFIC AREAS

10 TRENCHING DETAILS / VEHICULAR TRAFFIC AREAS

NTS


10

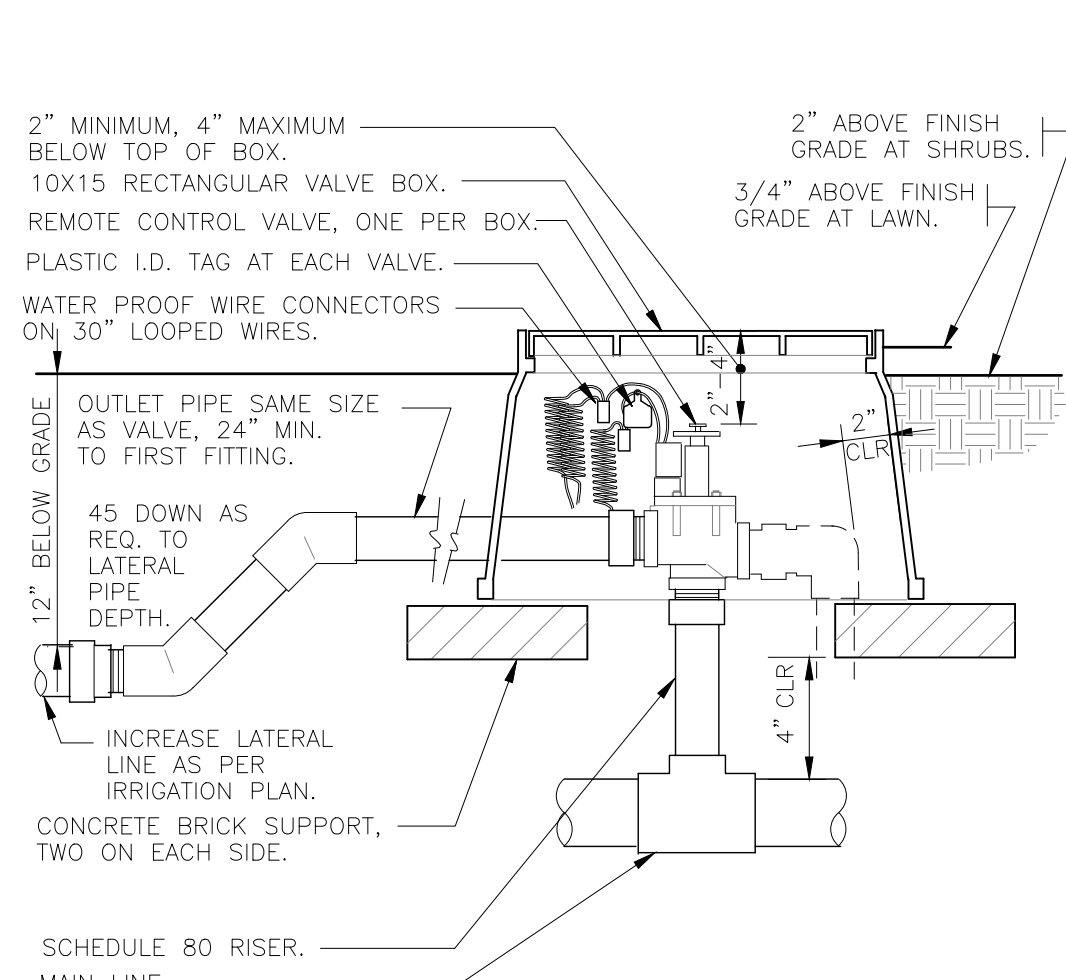

2 ELECTRIC REMOTE CONTROL VALVE

1 1/2" = 1'-0"


FX-IR-FX-HEAD-01

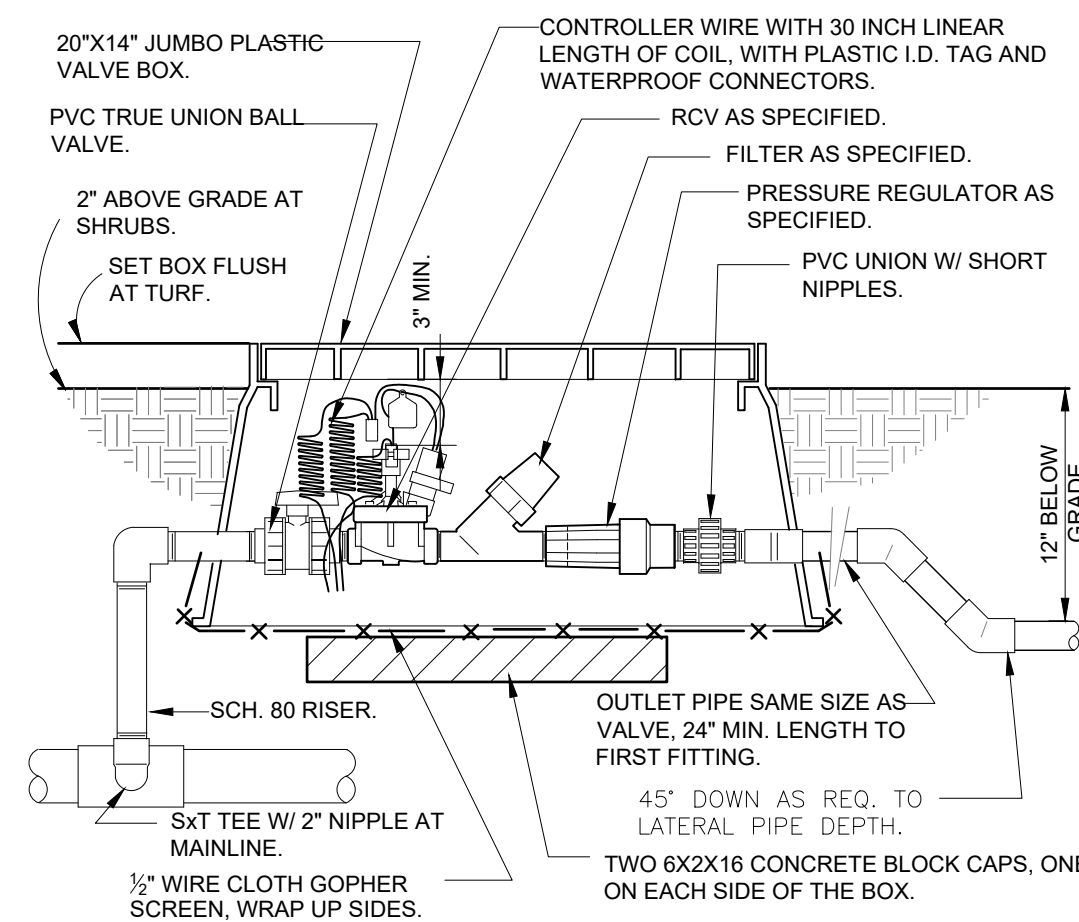

3 1" DRIP VALVE/FILTER/REGULATOR

1 1/2" = 1'-0"

328413.76-23

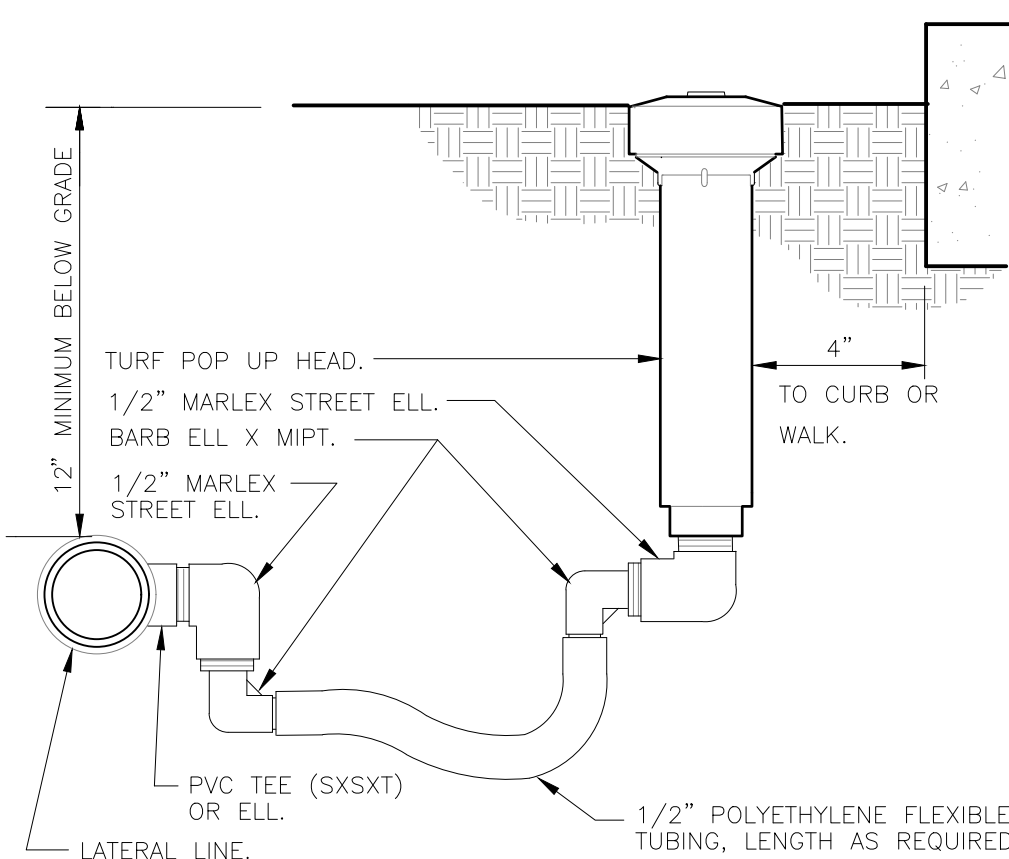

5 TURF SPRAY FLEX ASSEMBLY


3" = 1'-0"

328403.13-02

6 WALL MOUNT CONTROLLER

1" = 1'-0"

328409.13-01

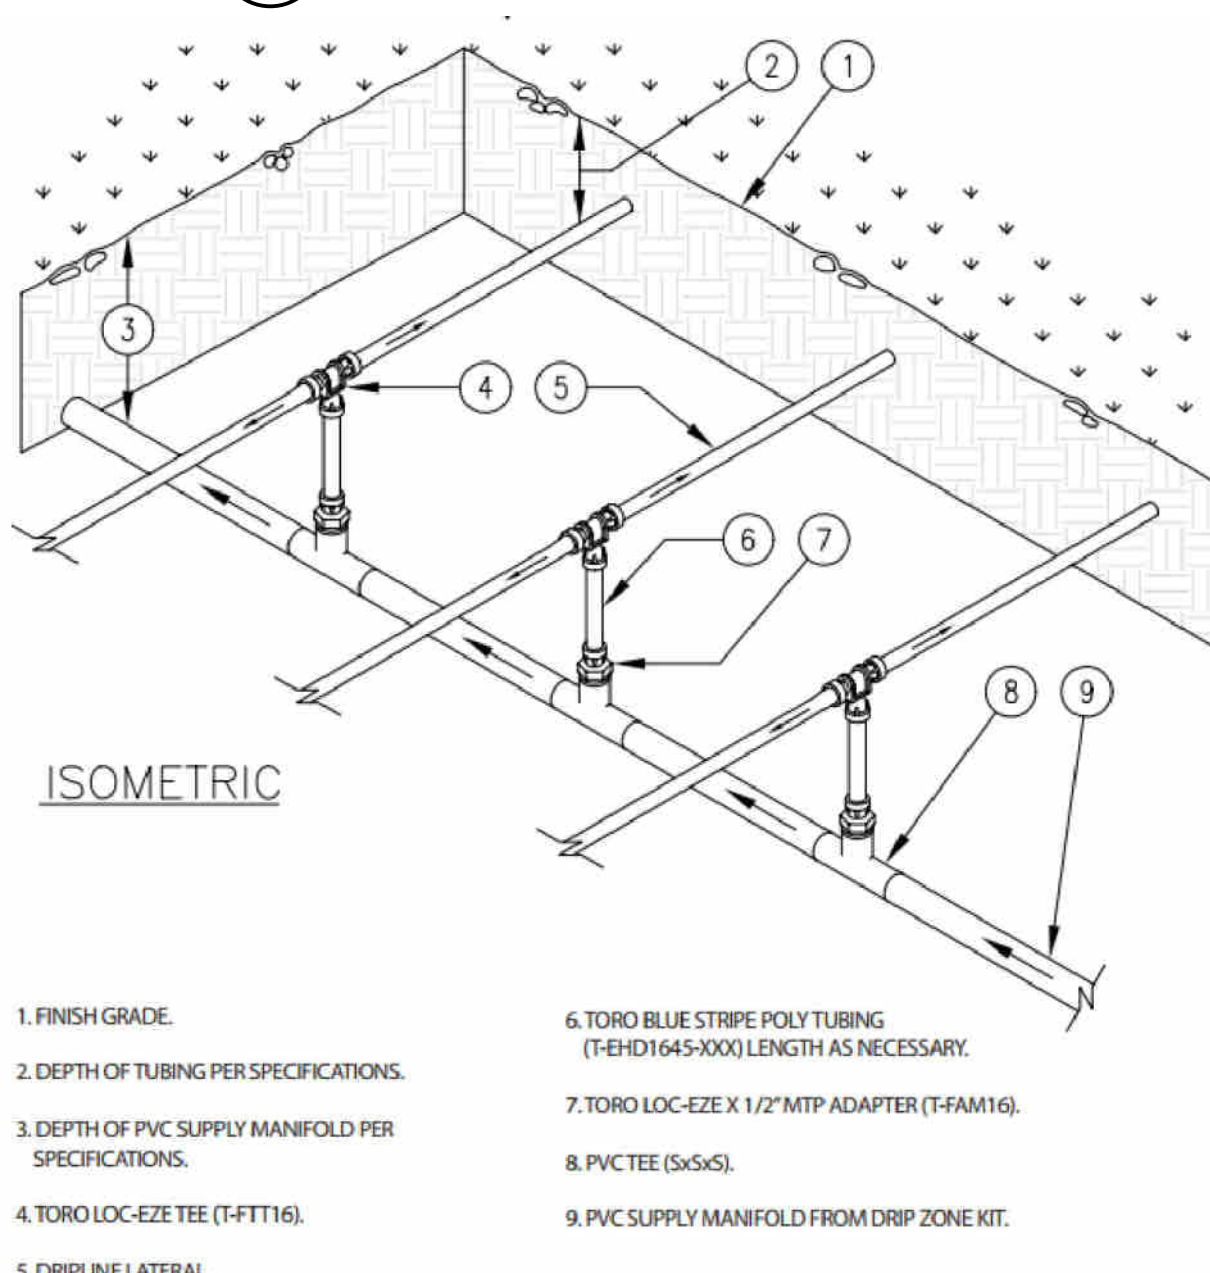


11 CENTER-FEED SUPPLY-MANIFOLD

N.T.S.

DETAIL-FILE

7 1/2" AIR/VACUUM RELIEF VALVE

N.T.S.

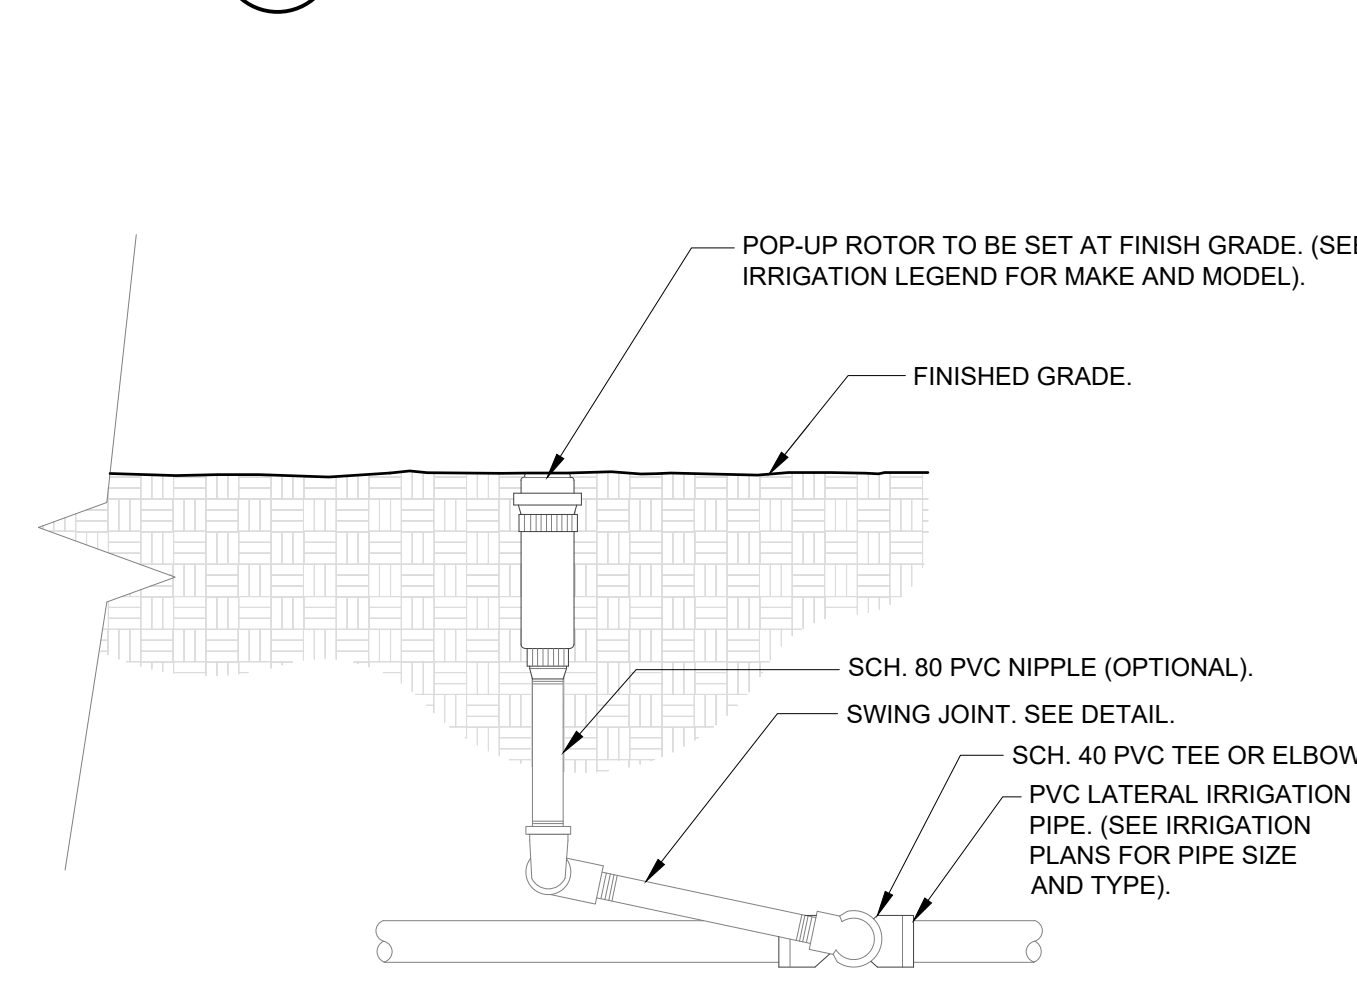

NOTES:
1- ALL THREADED CONNECTION POINTS BETWEEN SCH. 40 PVC AND SCH. 80 PVC FITTING SHALL BE INSTALLED USING TEFLON TAPE.
2- CONTRACTOR SHALL COMPACT SOIL AROUND ROTOR AND RISER PRIOR TO PLANTING, PLUGGING, SEEDING, OR LAYING OF SOD.

12 ROTOR SPRAYHEAD

1 1/2" = 1'-0"

FX-IR-FX-HEAD-01